


# INSTALLATION ARRANGEMENT DK2010

MAX TENSION  
1000N/100kg.  
ON STRAP

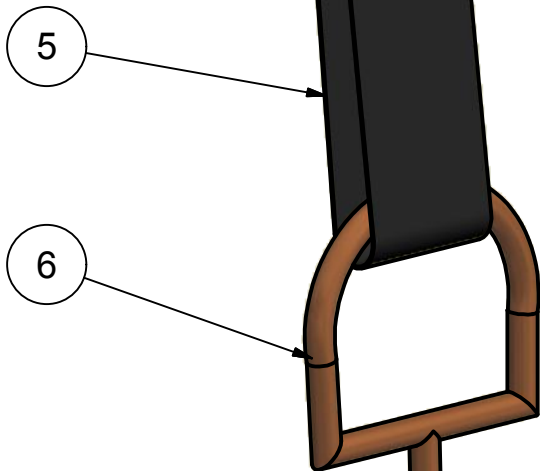


## CERTIFIED FOR

2½ years / 30 months

4 years / 48 months


DO NOT PAINT THE HRU.

MARKING MONTH/YEAR  
OF INSTALLATION

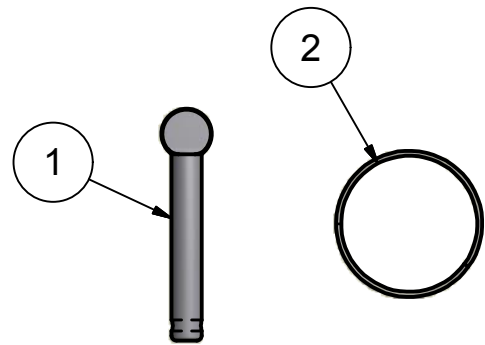

## IMPORTANT:

This notice and the  
HRU's serial No. XXXXX  
must be filed and placed on  
board the ship together  
with the ships documents.

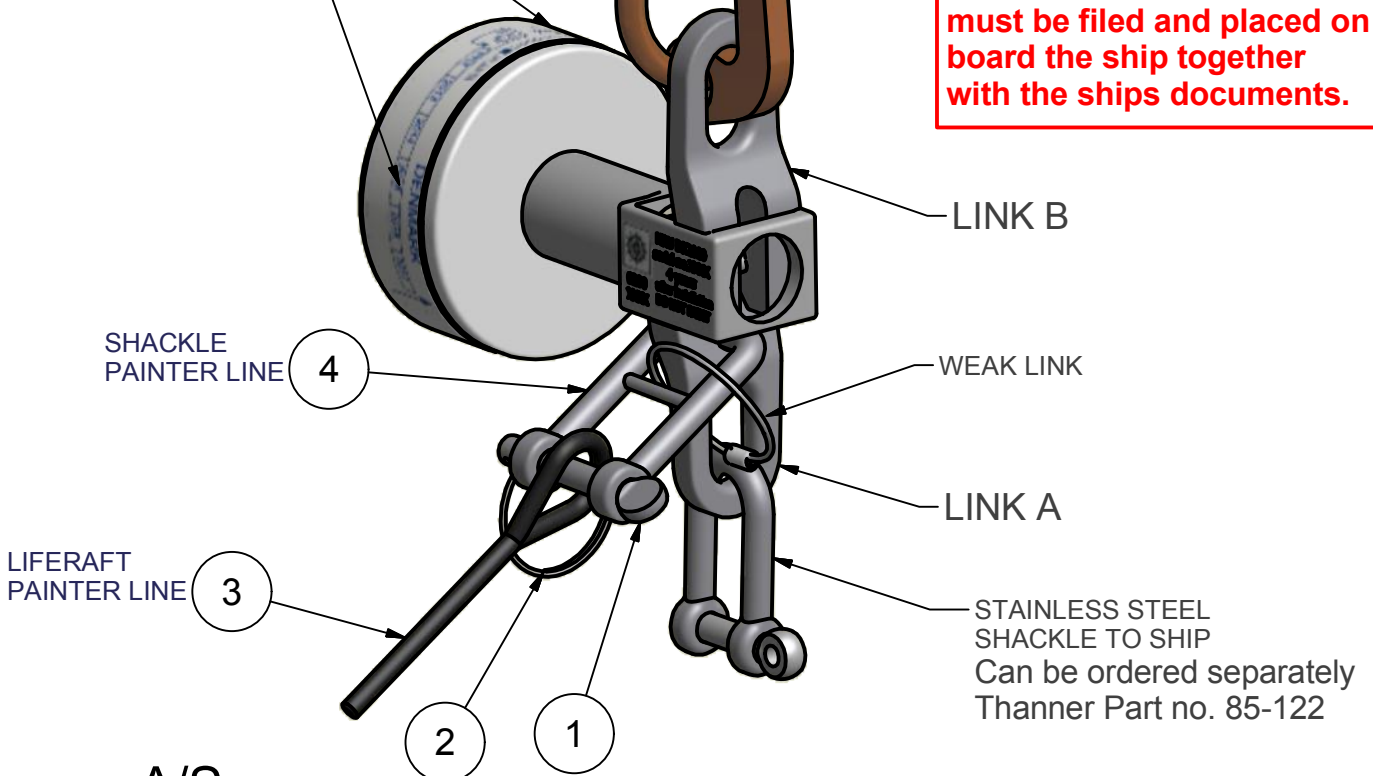

**Thanner A/S**

Phone (45) 75130066

Email Admin@thanner.dk

Thanner HRU DK2010

30 months (2 1/2 years) / 48 months (4 years)

Disposable Hydrostatic Release Unit

21.04.2017

85-199

# THANNER HRU DK 2010

4 YEARS / 48 MONTHS HYDROSTATIC RELEASE UNIT(HRU)

2 ½ YEARS / 30 MONTHS HYDROSTATIC RELEASE UNIT(HRU)

The THANNER HRU's are designed for liferafts with min 150N and max. buoyancy 15Kn(1500kg). max. buoyancy complies with IMO & SOLAS regulations for this application.

**NOTICE:** THE DK 2010 IS DESIGNED AND APPROVED FOR 4 YEARS / 48 MONTHS AFTER CORRECT INSTALLATION. (see specification on frontpage)

**NOTICE:** THE DK 2010 IS DESIGNED AND APPROVED FOR 2 ½ YEARS / 30 MONTHS AFTER CORRECT INSTALLATION. (see specification on frontpage)

## **INSTALLATION:**

The DK 2010 is supplied complete including weak link and installation instruction. The HRU must be installed in accordance with the manufacturers instruction. The installation is simple and should be fitted as illustrated on the front of this installation.

## **IMPORTANT:**

If moveable or loose dispose the HRU and replace with a new original packed in bubble bag.

To complete this installation 1 x 6 mm stainless steel shackle, attached the HRU bottom link (A) to the deck or liferaft cradle, is required. Shackle available at THANNER or commercial.

Check the expiry date and year has been marked correctly on the unit, the installation is not acceptable to marine inspectors unless correctly marked.

If required container label Thanner Part no. 85-192 is available.

## **INSTALL AS PER INSTRUCTION, ONLY.**

In the small plastic bag, please find the pin (1) and locking ring (2) for the painter line Shackle (4). Attach the painter line (3) with the pin (1), connect it to the shackle and attach the locking ring (2) to the pin (1).

Install the HRU to the raft container in the cradle, using the container strap (5) and a senhouse sliphook (6) to the upper link (B) and tighten up. **Max 1000N**

## **MANUAL RELEASE**

If the liferaft is to be launched manually, open the senhouse sliphook and the container is free and thrown overboard. Still connected to the deck or cradle through the painter line. Pull out the painter line from the liferaft, it will inflate and the liferaft will be boardable. Cut the painter line when boarded and the liferaft floats free.

## **IMPORTANT:**

**This notice and the HRU's serial No. must be filed and placed on board the ship together with the ships documents**

**DO NOT PAINT THE HRU.**